

WT-6063 leather softness tester



1. Introductions

The leather softness tester is specifically used to measure the softness of leather and animal hides, to understand whether the softness and hardness of leather in the same batch or packaging are uniform. The leather softness tester can also test the differences in softness and hardness of various parts of a single piece of leather.

2. Relative test methods

IULTCS,IUP/36, ISO17235

3. specifications

No.	Item	Spec.
1	Force	530±10g
2	Measuring meter	0.1-100mm
3	Dimension	13.6x48.5x16.8cm
4	Weight	5.3kg